UNLOADING

1. Push safety button to the "on" position (red indicator not showing).
2. Depress action bar lock and pull fore-end all the way rearward until,shell from barrel is ejected. Roll gun sideways to allow shell on carrier (#65) to drop from ejection port. Close action. Open and roll gun sideways to allow released shell from magazine to drop from ejection port. Continue until magazine and gun are empty.
3. Be doubly safe and at this time, check both the chamber and the magazine tube for any remaining shells.

SAFETY

1. The safety button is located to the rear of the trigger (#46) so that the shooter can quickly recognize by sight or feel, whether the "safety" is on or off.
2. For the right handed shooter, the safety button is set in the "on" or "safe" position by pushing the button from the left side so that it protrudes on the right side.
3. When pushed from the right side, the safety button is set in the "off" or "fire" position and protrudes on the left side and shows a red stripe.

NOTE: Even when not in use, it is good safety practice to have the safety button set in the "safe" position.

TO CONVERT SAFETY FROM RIGHT HAND TO LEFT HAND OPERATION:

1. Follow instructions to remove trigger plate assembly, (cleaning of trigger plate assembly).
2. **CAUTION:** Remove the safety button spring stop pin (#47). The safety button spring may eject when the drift punch is removed from the safety button pin hole.
3. Remove safety button spring (#50) and spring sleeve (#49).
4. Remove safety button (#46) and turn end-for-end (red indicator now should be on the right side of receiver) and replace with the double machine cut facing the safety button spring sleeve hole.
5. Replace safety button spring sleeve with open end up, spring and spring stop pin.
6. Replace trigger plate assembly.

CLEANING OF TRIGGER PLATE ASSEMBLY

1. Push the trigger plate pins (#7 & 8) with Drift Punch. (Fig. 1).
2. Remove trigger plate assembly. Assembly consisting of items (#32) thru (#54).
3. Trigger (#35), safety button (#46), Hammer (#39), Carrier Assembly (#41) and sear (#37) are assembled in trigger plate (#48).
4. Clean the trigger plate assembly with cleaing oil and dry thoroughly.
5. Lubricate with gun oil.
6. When replacing trigger plate into receiver, be sure action is closed, and trigger plate pin bushings are centered. If binding occurs, it is also helpful to have cocked the hammer (#39).
7. Replace trigger plate pins.

GUNSMITH ONLY

DISASSEMBLY AND CLEANING OF BREECH BOLT ASSEMBLY

1. Remove fore-end cap and barrel.
2. While depressing front of right shell stopper plate (#13), fore-end and bolt assembly can be pulled from the receiver.
3. Clean each part with cleaing oil, wipe dry and lubricate with gun oil and reassemble as follows:
   - A. Slide fore-end assembly over magazine tube.
   - B. Set breech bolt base with slotted end toward back of receiver on action bars and align with keying cuts.
   - C. Set breech bolt on breech bolt base and slide assembly into receiver until it stops about 3/4" into receiver.
   - D. Depress front of right shell stopper plate (#13) and then front of left stopper plate (#12) while pulling back lightly on fore-end which will slide assembly back into receiver.

INSTRUCTIONS FOR ORDERING PARTS

When odering parts, please give the following information.

1. Model number of the firearm.
2. Serial number of the firearm.
3. Gauge choke of the firearm.
4. Part name and number of the part required.

Please order parts separately from factory repair service as delivery may be delayed.

Send you order to:
Smith & Wesson
2100 Roosevelt Avenue
Springfield, MA 01101
Attn: Parts Department

INSTRUCTIONS FOR FACTORY SERVICE

Should your Smith & Wesson long gun require adjustment, repair, or refinishing, we recommend most sincerely that the weapon returned to the factory. There is no other way to insure that the work will be done in a properly equipped and staffed shop.

Charges are very reasonable, being based on the cost of parts replaced plus a labor charge for the time expended on the job. A labor charge for one hour is usually sufficient to cover all but very extensive overhaul jobs.

Long guns returned to the factory should be MARKED FOR THE ATTENTION OF THE SERVICE DEPARTMENT. A letter of instructions should be enclosed with the gun, and shipment by individuals must be Prepaid. Adherence to these suggestions will prevent loss of time in handling at the factory.

When you Long gun arrives for service, it will be carefully inspected, along with your letter of instruction. Warranty repairs will be processed and your gun promptly returned. Non-warranty repairs will be evaluated and an estimate of the cost of work to be performed will then be sent for your approval. No actual work will be commenced before receiving your confirmation/remittance.

THE SMITH & WESSON
SPORTING GOODS GROUP PRODUCTS

- CENTERFIRE RIFLES
- PUMP SHOTGUNS
- HANDGUNS
- AUTOMATIC SHOTGUNS
- LEATHER GOODS
- KNIVES

Smith&Wesson

For inquiries,
send to:
Smith & Wesson
2100 Roosevelt Ave.
Springfield, Ma. 01101

For service or parts,
send to: **Smith & Wesson**
2095 Roosevelt Ave.
Springfield, Ma. 01101
Attn. Service Dept.

S & W 09743

Printed in U.S.A.

Smith&Wesson

Model 3000 Police Pump

12 GA. SHOTGUN

OPERATION AND MAINTENANCE MANUAL

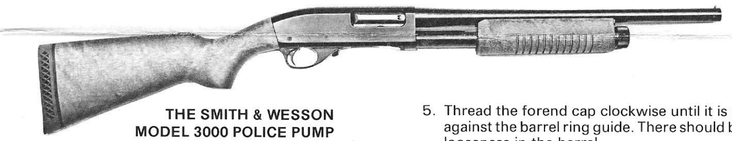

THE SMITH & WESSON MODEL 3000 POLICE PUMP

The Smith & Wesson Model 3000 Police Pump Shotgun has been designed and manufactured to provide years of outstanding performance. This manual has been prepared so that any owner of a S & W Model 3000 Police Pump will be able to have a better understanding of the proper care and routine maintenance of his new Smith & Wesson and as a result, enjoy the total satisfaction of his purchase. If there are any questions concerning material in this Manual, please contact the source from whom the S & W Model 3000 Police Pump was purchased or any qualified gunsmith.

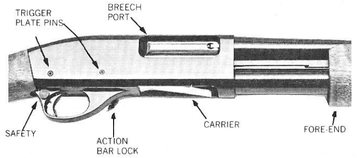

ASSEMBLY — (FIG. 1)

1. Push safety button to "on" position, (red indicator not showing) and unscrew the fore-end cap (if cap is on magazine tube #16) (#19)by turning counter-clockwise.
2. Depress the action bar lock (#63) and pull the fore-end (#13) back until the front of the bolt (#2) is approximately at the center of the ejection port. Check to see that the chamber and magazine tube are empty.
3. With the butt of the action group placed on a non-skid surface, position the barrel breech in the opening at the front of the receiver (#30) while alinging the barrel ring guide with the end of the magazine tube.
4. The barrel should slide easily into position with approximately 5/8" of the threaded end of the magazine tube exposed beyond the barrel guide ring.
5. Thread the forend cap clockwise until it is snug against the barrel ring guide. There should be no looseness in the barrel.

DISASSEMBLY

1. Depress the action bar lock (#32) and pull the fore-end (#21) back until the front of the bolt (#57) is approximately at the center of the ejection port.
2. Check to see that the chamber and magazine tube are empty.
3. Remove fore-end cap (#19) by twisting counter-clockwise.
4. While comfortably gripping the stock, draw the barrel (#2) free of the action group.

LOADING — (FIG. 1)

1. With the Model 3000 Pump fully assembled, push the safety button (#46) to the "on" position (red indicator not showing). This will place the gun in a safe condition.
2. While pointing the gun in a safe direction, depress the action bar lock and open the action by pulling the fore-end all the way rearward.
3. Load the first shot-shell through the ejection port. This can be done directly into the chamber or by laying the shell on the carrier (#41).
4. Close the action by pushing the fore-end to its extreme forward position.
5. Four more 2 3/4" sheels can be loaded into the magazine bu turning the gun so that the trigger guard is facing up. Depress the carrier with the front end of the shell and push the shell fully into the spring loaded magazine tube.

CAUTION: CYCLING ACTION WITHOUT BARREL INSTALLED MAY DAMAGE INTERNAL PARTS.

				1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58
	ORDER NUMBER	STOCK	BARREL ASSEMBLY	STOCK RETAINER (INCL. SWIVEL ASSY.)	STOCK BOLT ADAPTER	WASHER	STOCK SPACER	TRIGGER PLATE PIN (LARGE)	TRIGGER PLATE PIN (SMALL)	SHELL STOPPER PIN	SHELL STOPPER PLATE SPRING	LATCH PIN STOPPER SPRING	MAGAZINE SHELL STOPPER PLATE (LEFT)	MAGAZINE SHELL STOPPER PLATE (RIGHT)	EJECTOR	MAGAZINE TUBE	MAGAZINE FOLLOWER	MAGAZINE SPRING	MAGAZINE SPRING RETAINER	FOREND CAP	FOREND TUBE ASSY	FOREND	FOREND TUBE NUT	BREECH BOLT BASE	FIRING PIN	FIRING PIN SPRING	FIRING PIN RETAINING PIN	LOCKING BLOCK	LOCKING BLOCK STUD	EXTRACTOR SPRING PLUNGER	EXTRACTOR SPRING	EXTRACTOR	ACTION BAR LOCK	TRIGGER PLATE PIN BUSHING SPRING (SMALL)	TRIGGER PLATE PIN BUSHING (SMALL)	TRIGGER ASSEMBLY	SEAR SPRING	SEAR	HAMMER SPRING	HAMMER	HAMMER SPRING SLEEVE	CARRIER ASSEMBLY	CARRIER SPRING SLEEVE	HAMMER PIN	CARRIER SPRING	TRIGGER PIN	SAFETY BUTTON	SAFETY BUTTON SPRING	SAFETY BUTTON STOPPER PIN	TRIGGER PLATE	SAFETY BUTTON SPRING SLEEVE	SAFETY BUTTON SPRING	SEAR PIN	TRIGGER PLATE PIN BUSHING (LARGE)	TRIGGER PLATE PIN STOPPER SPRING (LARGE)	ACTION BAR LOCK SPRING	RECEIVER	PLASTIC PLUG	BREECH BOLT	LOCK WASHER
BLUED	241000	Wood	18" bead	14700	12990	12994	12490	12390	12677	12678	12376	12377	12342	12651	12350	12454	12652	12348	12653	12654	12686	12986	12737	12685	12987	12989	12332	12333	12988	12659	12330	12329	12657	12993	12403	12401	12664	12375	12373	12667	12668	12340	12975	12676	12669	12675	12395	12992	12372	12662	12371	12370	12663	12430	12402	12671	12649	—	12656	—
	243000	Stock	20" rifle	14800	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"
	245000	12740	20" bead	14900	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"
	241100	Folding	18" bead	14700	12928	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	12814	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	243100	Stock	20" rifle	14800	"	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	"	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	245100	12949	20" bead	14900	"	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	"	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	241200	Pistol	18" bead	14700	12929	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	243200	Grip	20" rifle	14800	"	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	245200	12943	20" bead	14900	"	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	241300	Plastic	18" bead	14700	"	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	243300	Stock	20" rifle	14800	"	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	245300	12978	20" bead	14900	"	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
PARKERIZED	242000	Wood	18" bead	14701	12990	12994	12490	12390	12677	12678	12376	12377	12342	12651	12350	12454	12462	12348	12653	12654	12927	12455	12737	12685	12987	12989	12332	12333	12988	12659	12330	12329	12657	12993	12403	12401	12459	12375	12373	12667	12668	12340	12734	12676	12669	12675	12395	12992	12372	12457	12371	12370	12663	12430	12402	12671	12463	—	12974	—
	244000	Stock	20" rifle	14801	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	12930	"	"	"	"	"	"	"
	246000	12740	20" bead	14901	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"	"
	242100	Folding	18" bead	14701	12928	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	12814	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	244100	Stock	20" rifle	14801	"	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	"	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	246100	12950	20" bead	14901	"	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	"	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	242200	Pistol	18" bead	14701	12929	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	244200	Grip	20" rifle	14801	"	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	246200	12943	20" bead	14901	"	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	242300	Plastic	18" bead	14701	"	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	244300	Stock	20" rifle	14801	"	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	246300	12978	20" bead	14901	"	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

MODEL 3000 POLICE PUMP EXPLODED VIEW

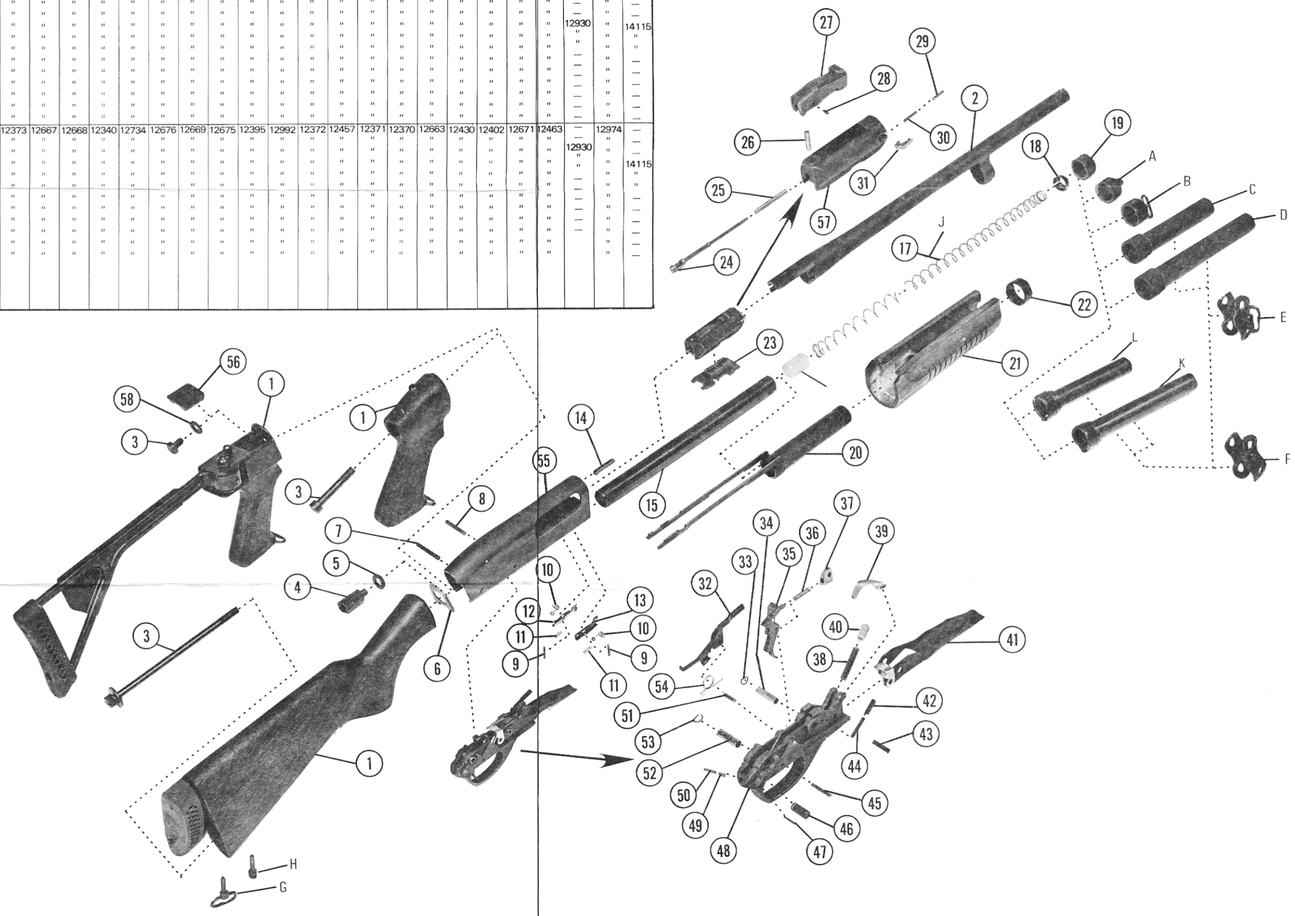

ACCESSORY	ITEM DESCRIPTION	ITEM NECESSARY	ORDER NUMBER BLUED	ORDER NUMBER PARKERIZED
2 — Shot Extension	Extension Tube	C	12901	12902
	Spring	J	12915	12915
	Clamp Assembly	F	12918	12919
3 — Shot Extension	Extension Tube	D	12903	12904
	Spring	J	12915	12915
	Clamp Assembly	F	12918	12919
2 — Shot Extension Fixed Swivel For Pistol & Folding Stock	Extension Tube	C	12901	12902
	Spring	J	12915	12915
	Clamp Assembly	E	12920	12921
2 — Shot Extension Fixed Swivel For Wood & Plastic Stock	Extension Tube	C	12901	12902
	Spring	J	12915	12915
	Clamp Assembly	E	12920	12921
	Stock Fixed Swivel	G	12795	12795
2 — Shot Extension QD for Pistol & Folding Stock	Extension Tube	L	12923	12924
	Spring	J	12915	12915
	Clamp Assembly	F	12918	12919
3 — Shot Extension QD for Wood & Plastic Stock	Extension Tube	K	12925	12926
	Spring	J	12915	12915
	Clamp Assembly	F	12918	12919
	Stock QD Stud	H	12794	12794

ACCESSORY	ITEM DESCRIPTION	ITEM NECESSARY	ORDER NUMBER BLUED	ORDER NUMBER PARKERIZED
QD Attachments For Pistol & Folding Stock	QD Mag. Cap	A	14080	14079
QD Attachments For Wood & Plastic Stock	QD Mag. Cap	A	14080	14079
	Stock QD Stud	H	12794	12794
Fixed Swivel Attachments For Pistol & Folding Stock	Fixed Swivel Mag. Cap	B	12979	12980
Fixed Swivel Attachments For Wood & Plastic Stock	*Fixed Swivel Mag. Cap*	B	12979	12980
		G	12795	12795

NOTE (1) Item No. 19 is eliminated when all accessories are applied to shotgun.

(2) Item No. 18 is eliminated when extension tubes are used.